

Veito Remote Control

warmup[®]
Est. 1994

Underfloor heating | Tiled shower solutions



Remote Control Signal

- Make sure it is not obstructed
- Maximum distance: (5m)
- Signal received sound – one short beep or one long beep

You can also use the buttons on the unit to operate the heater.

Operating Instructions

- Turn the heater on



- Turn the heater off



- **Level**

Heating capacity can be set to 4 different levels from 900 –2000 watts (P1, P2, P3 & P4). If the heater exceeds temperature requirements, it will switch itself off.



Press the level button and change the power setting by pressing the arrow buttons

- **Auto**

Automatic temperature control regulates power consumption based on your set temperature and eliminates annoying hot and cold cycles



Press the auto button and then set the desired temperature by pressing the arrow buttons

Timer

When the timer is set the heater will automatically shut down at the end of the determined time (1 hr to 9 hrs).



Press the timer button and then set the sleep timer by pressing the arrow buttons

WARMUP NEW ZEALAND LTD

T 0800 927 687 E info@warmup.co.nz www.warmup.co.nz